

**VTVS REMOTE CONTROLLER WITH LED
TELECOMANDO VTVS CON LED
MANDO A DISTANCIA VTVS CON LUZ**



**ON/OFF BUTTON
PULSANTE ON/OFF
BOTON ON/OFF**



**LUMINOUS LED
LED LUMINOSO
LED LUMINOSO**

**CLEAR BUTTON C
PULSANTE AZZERAMENTO
BOTON POWER A TERO C**

**FEED BUTTON
PULSANTE AVANZAMENTO
BOTON ADELANTAMIENTO**



- TO INCREASE THE NUMBER, PRESS CENTRAL FEED BUTTON
- TO INCREASE THE NUMBER QUICKLY, KEEP PRESSING CENTRAL FEED BUTTON
- TO REPEAT THE NUMBER, PRESS ON-OFF BUTTON
- TO CLEAR THE DISPLAY, PRESS C BUTTON FOR TWO SECONDS
- TO DISPLAY THE PREVIOUS NUMBER, PRESS C AND CENTRAL BUTTONS SIMULTANEOUSLY
- TO CHANGE THE SET CODE, PLEASE PROCEED LIKE THIS:
 1. PRESS C, CENTRAL AND ON-OFF BUTTONS SIMULTANEOUSLY TILL THE RED LED LIGHT SWITCHES ON
 2. KEEP PRESSING THE THREE BUTTONS TILL THE LED SWITCHES OFF
 3. RELEASE THE BUTTONS, THE CONTROLLER LIGHT STARTS FLASHING, EACH FLASH SEQUENCE CORRESPONDS TO THE CODE YOU HAVE TO SET.

- 16 FLASHES → CODE 15
1 FLASH → CODE 0
2 FLASHES → CODE 1
..... etc.....
4. TO SET A NEW CODE, PRESS THE CENTRAL BUTTON IMMEDIATELY AFTER THE CODE YOU NEED AND FIT
5. TO CANCEL, PRESS C BUTTON



- PER FAR AVANZARE IL NUMERO, PREMERE IL PULSANTE CENTRALE D'AVANZAMENTO
- PER AVANZARE VELOCEMENTE, ESERCITARE UNA PRESSIONE PRO-LUNGA SUL TASTO CENTRALE
- PER RIPETERE IL NUMERO, PREMERE IL TASTO ON-OFF
- PER AZZERARE IL VISORE, PREMERE IL PULSANTE C PER 2 SECONDI
- PER VISUALIZZARE IL NUMERO PRECEDENTE, PREMERE CONTEMPORANEAMENTE IL TASTO C E IL TASTO CENTRALE

- 16 LAMPREGGI → CODICE 15
1 LAMPREGGIO → CODICE 0
2 LAMPREGGI → CODICE 1
..... etc.....
4. PER IMPOSTARE UN NUOVO CODICE, PREMERE IL TASTO CENTRALE IMMEDIATAMENTE DOPO IL NUMERO DI LAMPREGGI DESIDERATO
5. PER ANNULLARE PREMERE IL TASTO C

- PARA AVANZAR EL NUMERO, APRETAR EL BOTON CENTRAL
- PARA ADELANTAR EL NUMERO RAPIDAMENTE, MANTENER APRETADO EL BOTON CENTRAL
- PARA REPETIR EL NUMERO, APRETAR EL BOTON ON/OFF
- PARA PONER A CERO LA PANTALLA APRETAR DURANTE 2 SEGUNDOS EL BOTON ON/OFF
- PARA RETORCEDER UN NUMERO APRETAR SIMULTANEAMENTE EL BOTON C Y EL BOTON CENTRAL

- 16 SEÑALES LUMINOSAS → CODIGO 15
2 SEÑALES LUMINOSAS → CODIGO 0
..... etc.....
4. PARA CAMBIAR UN NUEVO CODIGO, APRETAR EL BOTON GRANDE INMEDIATAMENTE DESPUES DE LAS SEÑALES LUMINOSAS Y EL CODIGO DESEADO QUEDARA FLUIDO
5. PARA ANULLAR, APRETAR EL BOTON C

**VTVS DATA SHEET SCHEDE TECNICHE VTVS
CARACTERÍSTICAS TÉCNICAS VTVS**

POWER SUPPLY 9V BATTERY
BATTERIA/ACCUMULATORE
WSPORG/PRESUPUNTA 9V
MOSKONG/PINTE 120IT
OPERATING TEMPERATURE 45°/145°
ALIMENTAZIONE BATTERIA/
AUTOMOBILIANA 9V/9S
PRELUNGA LAVORO 433,2-868 MHz
POTENZA 1,2WIT
TEMPERATURA OPERATIVA 45°/145°
RESPONSE/AMPIEZZA BATTERIA/9V
CATEGORIA DELLA BATTERIA 9V/9S
FREQUENZA DEL TRASMISSIONE 433,2 E 868 MHz
DISTANZA DI RICEVIMENTO 14,2 METROS
TEMPERATURA DE FUNCIONAMIENTO 45°/145°
TO OPEN THE BATTERY SECTION AND/OR FOLDER
BOTONS DE INICIAR LA SECCION Y/O DE LA CARCASA
FERRARE L'USO DELLA BATTERIA/ACCUMULATORE
PRENDERE E TORNARE A CHIUDERE
543,4588814/09020 FONDE SE BLENTERA L'USO DELLA BATTERIA
940000VITEL 94014 E MODELO DE 9959817E340000VITEL

**INFORMATION ON THE TREATMENT OF WASTE
ELECTRICAL AND ELECTRONIC EQUIPMENT:**

1) It is forbidden to trash EEE products along with normal wastes (Directive 2002/96/CE dated January 27th - 2003 and following).
2) For electronic products, please refer to the instructions for use and/or the manufacturer's website for more information.
3) The symbol (the crossed-out wheeled bin) indicates that the product should not be disposed of with normal household waste but rather in a separate collection for electrical and electronic equipment.
4) By directive 2002/96/CE dated January 27th - 2003 (en 15) and through the relative legislative decrees issued by any Member State, all Member States have determined general, specific and/or special provisions applicable to products of the crossed-out provisions adopted.



**REMOTE CONTROLLER
RADIOCOMANDO
MANDO A DISTANCIA**

**INSTRUCTION
ISTRUZIONI
INSTRUCCIONES**